



SUBARU

GENUINE PARTS

INSTALLATION INSTRUCTIONS

SUNSHADE

SOA3991120 - WRX / Sti

SOA3991220 - Forester

SOA3991320 - Impreza/Crosstrek, WRX/STI

SOA3991420 - Tribeca

SOA3991520 - BRZ

SOA3991620 - Legacy / Outback

SOA3991720 - Forester


SOA3991820 - Legacy / Outback

SOA3991920 - Ascent

PACKAGE CONTENTS: SUNSHADE (QTY. 1), STORAGE BAG (QTY. 1), TOOLS REQUIRED: NONE


1

Unfold the Sunshade with the silver side facing outward and place it flat onto the dash area. Then slide it forward until it reaches the bottom of the windshield.

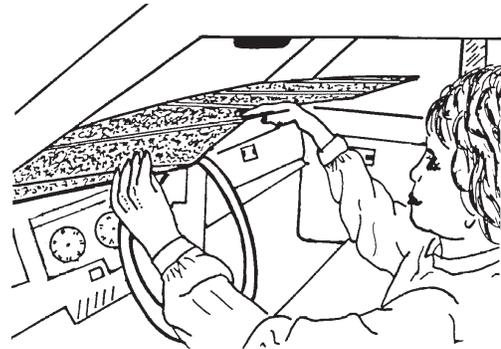

2

With both hands, lift the top of the Sunshade into the windshield area. (Be sure not to bend corners while installing, or damage to the inner insulator may occur.) On Eyesight equipped vehicles, do not allow the Sunshade to contact the Eyesight housing or unit when installing or removing the Sunshade.

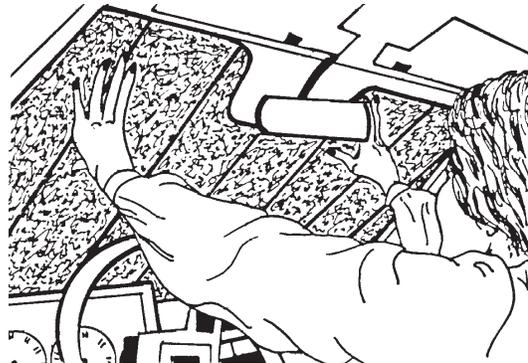

3

Pull down each sun visor to hold the Sunshade in place. There is nothing to attach to your vehicle. The Sunshade is not designed to fit tightly against the windshield.

To remove, simply reverse the steps shown above, fold unit and store in a suitable location.





SUBARU

PIÈCES D'ORIGINE

INSTRUCTIONS D'INSTALLATION

ÉCRAN SOLAIRE

SOA3991120 - WRX / Sti

SOA3991220 - Forester

SOA3991320 - Impreza/Crosstrek, WRX/STI

SOA3991420 - Tribeca

SOA3991520 - BRZ

SOA3991620 - Legacy / Outback

SOA3991720 - Forester


SOA3991820 - Legacy / Outback

SOA3991920 - Ascent

CONTENU DE L'EMBALLAGE : ÉCRAN SOLAIRE (QTÉ. 1), SAC DE RANGEMENT (QTÉ. 1), NOTICE (QTÉ. 1)
1) OUTILS NÉCESSAIRES : AUCUN

1

Dépliez l'écran solaire avec la face argentée vers l'extérieur et disposez-le à plat sur le tableau de bord. Glissez-le ensuite vers l'avant jusqu'à ce qu'il atteigne le bas du pare-brise.

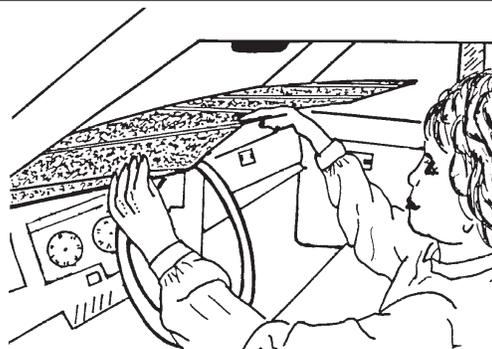

2

Avec les deux mains, soulevez l'écran jusqu'au pare-brise. (Prenez garde de ne pas plier les coins pendant la mise en place, ce qui risquerait d'abîmer l'isolant interne.) Dans les véhicules équipés de la caméra EyeSight, ne laissez pas l'écran solaire entrer en contact avec le boîtier de la caméra EyeSight lorsque vous posez ou enlevez l'écran solaire.



3

Baissez les deux pare-soleil du véhicule pour retenir l'écran solaire. Vous n'avez aucune fixation à attacher au véhicule. L'écran solaire n'est pas conçu pour épouser parfaitement les formes du pare-brise. Pour enlever l'écran, inversez simplement les étapes ci-dessus, pliez l'écran et rangez-le à un endroit sûr.

